


Hunter D-25A

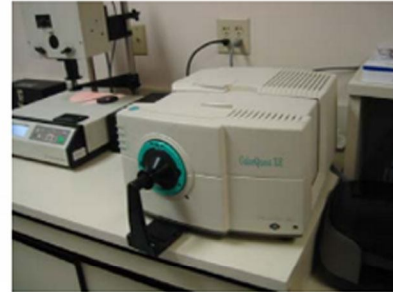

Hunter
ColorQuest XE

Brightness

We measure TAPPI (or GE) brightness using a Technidyne S-4 Brightmeter, which measures brightness in accordance with TAPPI test method T-452. We also use a Hunter D-25A Colorimeter, which measures both brightness and shade.

We have a Hunter ColorQuest XE spectrophotometer with diffuse lighting and an integrating sphere for ISO brightness measurement. It includes a UV filter so it can measure the effect of optical brighteners. This instrument will also measure both shade and brightness.

APPLIED PAPER TECHNOLOGY, INC.



678 627-0222 | 1935 DELK INDUSTRIAL BLVD. SUITE B, MARIETTA, GA 30067 | APPLIEDPAPERTECH.com